
User's Guide for the

CT-URDC6
6-in-1 Cable TV Remote Control
for U.S.A



1 INSTALL BATTERIES

Two AAA batteries must be installed before you can program or operate the remote control.
1.Remove the battery compartment cover located on the back of the remote control.
2.Place the batteries in the compartment in positions matching the picture below.
3.Replace the battery compartment cover.




IMPORTANT NOTE
Use only new AAA alkaline batteries to insure consistent operation

2 KNOW YOUR REMOTE

The remote control is designed to operate the Motorola DCT1XXX, DCT2XXX,DCT5XXX, +DCT-6XXXseries set tops. You can also control the major brands of TV,VCR,DVD,AUDIO and more CABLE converters equipment in the market as shown below.

CABLE: Cable converters
VCR: VCRs and TV/VCRs
TV: Televisions
DVD: DVD players

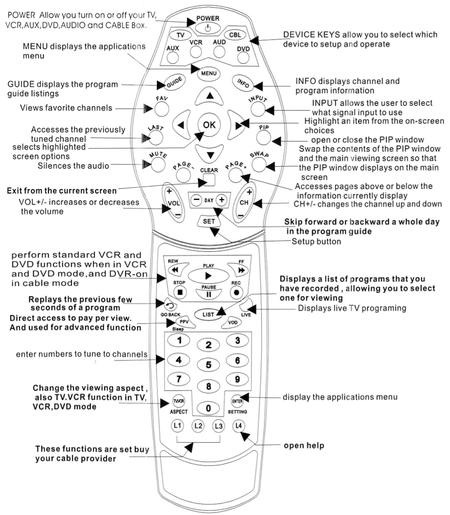

The Enterprise remote control is already programmed the code for your Cable Converter. The following sections will help you program your remote to control your other entertainment components.

3 SETTING THE CODE

Follow the steps 1 and 2 below for each component you are going to use with the commander.

Step 1: Entering the code number (Motorola DCT6208, DCT2XXX, DCT5XXX Series code number is **148** and Scientific-Atlanta Explorer 8000, Pioneer Voyager DVR, Pace Micro DVR Series code number
is **169**)

1. Power on the component you want to set up, see the supplied [code list] , and find thethree digit code number for the desired component.
If more then one code number is listed, use the number that's listed first to complete the steps below.
For example, if you are setting up a SONY' TV, you would use the code number xxx.
If you component isn't listed, see [searching for the correct code].
2. Press and hold the [SET] button until the current device indicator light lights (about 3secs), then
release the SET button.
3. Press and release the device button that you want to set up, the corresponding device indicator light
will light on.
4. Enter the component's code number.
For example, if you are entering the code for a SONY' TV, you would press xxx. After every entering, the device indicator light will blink one time. After all the three digit number is entered, the indicator light will turn off. If the code is not valid, the indicator light will blink three times then turned off. Check the code list and go back to step 2 to repeat process.

Step 2: Checking if the code number works

5. Aim the remote commander at the component and press a button to check if that button works. If it

4 SEARCHING FOR THE CORRECT CODE

If you have tried all the code number listed for your component and you still cannot get the commander to work (or if your component is not listed in the [code list] tables),try these steps.

Manual search

1. Power on the component you want to set up.
2. Press and hold the [SET] button until the current device indicator light lights (about 3secs), then release the [SET] button.
3. Press and release the device button that you want to set up, the corresponding device indicator light will on.
4. Aim the remote commander at the component, press and release the [POWER] button until your device turns off. Important you may have to press [POWER] button up to 200 times.
5. When your device turns off, press and release the [ENTER] button, the indicator light will turn off.

AUTO search

Follow the steps 1 to 3 on Manual search, and at the step 4 press and release [UP] or [DOWN] button to select the next or previous searching direction, then at every 2secs a new code will be transmitted. When your device turns off, press and release the [ENTER] button, the indicator light will turn off.

5 PROGRAMMING FOR [AUX] BUTTON

You can assign any one of the devices to the [AUX] button.

1. Press and hold the [SET] button until the current device indicator light lights (about 3secs), then release the [SET] button.
2. Press and release the [AUX] button, the AUX indicator light will blink once.
3. Press and release the device button you want to set up on the AUX button, the indicator light will change to the current device.
4. Enter 3 digit numbers. Every entering, the device indicator light will blink once. After all the three digit number is entered, the indicator light will turn off. If the code is not valid, the indicator light will blink three times then turn off.

6 PUNCH-THROUGH FUNCTION

For the device (VCR, CABLE or AUX), the VOL+, VOL- and MUTE button sometimes couldn't control unit itself. At this time, the three buttons will punch through to TV.
For the device (TV, CBL), the REW, PLAY, FF, STOP, PAUSE and REC button sometimes couldn't control unit itself. At this time, the six buttons will punch through to DVD.

7 CODE LIST

NOTE:
After battery off, each setting will return to the initial status.

CODE LIST

TV

AMARK	0112 • 0143
ABEX	0025
ACCURIAN	0036
ADMIRAL	0072 • 0251 • 0333
ADVENT	0247 • 0388
ADVENTURA	0002
AIKO	0103
AKAI	0116 • 0146 • 0248 • 0404 • 0405 • 0473
	0475 • 0323 • 0387 • 0391 • 0021 • 0062
	0063 • 0064 • 0066 • 0067 • 0068 • 0069
	0070 • 0071 • 0077
ALBATRON	0017
ALERON	0028
AMERICAACTION	0043
AMPRO	0073
AMSTRAD	0052
ANAM	0043 • 0054 • 0056 • 0080 • 0112
AOC	0116 • 0363 • 0112 • 0058
APEX DIGITAL	0006
ASTAR	0477
AUDIOVOX	0076 • 0454 • 0388
AVENTURA	0052
AVION	0441
AXION	0039
BELCOR	0116
BELL&HOWELL	0333 • 0072
BENQ	0423
BOXLIGHT	0266
BRADFORD	0043
BROCKWOOD	0116
BROKSONIC	0238
BYDESIGN	0031 • 0032
CANDLE	0116 • 0002 • 0003 • 0363
CAPEHART	0058
CARY AUDIO DESIGN	0443 • 0266
CELEBRITY	0001
CENTURION	0116
CETRONIC	0043
CHANGHONG	0247
CITIZEN	0116 • 0002 • 0003 • 0363 • 0043 • 0258
	0103 • 0143
CLARION	0043
CLASSIC	0043
CLP CLASSIC	0333
COLORTYME	0116
CONCERTO	0363
CONCIERGE	0073
CONTEC	0043 • 0050 • 0051
CORNEA	0116
CORONADO	0143
CRAIG	0043 • 0054
CROSLEY	0164
CROWN	0043 • 0143
CURTIS MATHES	0116 • 0258 • 0363 • 0143
CXC	0043
CYBERHOME	0015
DAEWOO	0363 • 0016 • 0043 • 0044 • 0076 • 0103
	0114 • 0125 • 0127 • 0143
DAYTRON	0363 • 0143
DELL	0320 • 0164 • 0363
DIMENSIA	0333
DREAMVISION	0235
DUKANE	0011 • 0025
DUMONT	0116 • 0073
DURABRAND	0096 • 0052
DWIN	0257
DYNASTY	0043
DYNEX	0400
EIKI	0187
ELECTROBAND	0001
ELECTROGRAPH	0466
ELECTROHOME	0143 • 0024 • 0076 • 0196
ELEKTRA	0072
ELEMENT	0363 • 0494 • 0526
EMERSON	0028 • 0048 • 0043 • 0155 • 0005 • 0116
	0363 • 0047 • 0050 • 0051 • 0076 • 0096
	0143 • 0153 • 0154 • 0052 • 0514
ENVISION	0116
EPSON	0324
ESA	0323
FISHER	0007 • 0057
FUJITSU	0246 • 0198 • 0410
FUNAI	0028 • 0043 • 0052
FUTURETECH	0043
GATEWAY	0242 • 0268
GE	0073 • 0116 • 0008 • 0009 • 0034 • 0056
	0074 • 0155 • 0333 • 0363
GEM	0391
GIBRALTER	0116 • 0073
GO VIDEO	0026
GOLDSTAR	0113 • 0116 • 0102 • 0363 • 0106 • 0112
	0127 • 0143
GRUNPY	0028 • 0043
HAIER	0363 • 0501
HALL MARK	0363
HANNSPREE	0349 • 0381
HARLEY DAVIDSON	0028
HARVARD	0043
HAVERMY	0081
HELLO KITTY	0076
HIMITSU	043
HISENSE	0419 • 0442
HITACHI	0011 • 0166 • 0009 • 0010 • 0012 • 0023
	0075 • 0143 • 0158 • 0072 • 0363 • 0250
HP	0378 • 0316 • 0327 • 0421
HUMAX	0518
HYUNDAI	0337 • 0338
ILO	0472
INFINITY	0164
INFOCUS	0333 • 0230 • 0547 • 0548
INITIAL	0035 • 0282
INSIGNIA	0350 • 0400 • 0052 • 0164 • 0403 • 0454
	0457
INTEQ	0073
JANEIL	0002
JBL	0164
JCB	0001
JCPENNEY	0024 • 0116 • 0008 • 0009 • 0030 • 0065
	0258 • 0143 • 0333 • 0363
JENSEN	0013
JVC	0038 • 0034 • 0001 • 0083 • 0199 • 0210
KAWASHO	0116 • 0001
KEC	0043
KENWOOD	0116 • 0001
KLEGG	0466
KLOSS	0002 • 0059
KMC	0143
KNOLL SYSTEMS	0230
KONKA	0457
KREISEN	0530
KTV	0043 • 0116 • 0143 • 0154
KURAZAI	0072
LG	0363 • 0113 • 0116 • 0102 • 0106 • 0112
	0127 • 0143
LITEON	0268
LODGENET	0072
LOEWE	0164
LOGIK	0072
LUXMAN	0363
LXI	0166 • 0007 • 0138 • 0052 • 0251 • 0333
	0164
MAGNAVOX	0164 • 0059 • 0116 • 0003 • 0060 • 0061
	0363 • 0127 • 0022 • 0333 • 0094 • 0226
	0390 • 0467
MAJESTIC	0333 • 0072
MARANTZ	0116 • 0164 • 0281
MATSUI	0164
MATSUSHITA	0080
MAXENT	0242
MEGATRON	0116 • 0011
MEMOREX	0007 • 007 • 0363
MGA	0116 • 0363 • 0024 • 0028 • 0042
MIDLAND	0333 • 0073
MINTEK	0362
MINUTZ	0008
MISAKAI	0052
MITSUBISHI	0124 • 0109 • 0024 • 0028 • 0040 • 0042
	0146 • 0191 • 0363 • 0348
MONIVISION	0017
MONTGOMERY WARD	0333 • 0072
MOTOROLA	0081
MTC	0116 • 0363 • 0258
MULTITECH	0043
NAD	0138 • 0025
NEC	0272 • 0197 • 0134 • 0116 • 0040 • 0016
	0024 • 0056 • 0019 • 0262 • 0236 • 0281
NET TV	0242
NIKEI	0043
NIKKO	0116
NIKO	0527
NORCENT	0390
NORWOOD MICRO	0027
NTC	0103
NUVISION	0351
OLEVIA	0432 • 0363 • 0333
ONKING	0043
ONWA	0043
OPTMUS	0025
OPTOMA	0265 • 0249
OPTONICA	0019 • 0251
ORION	0096
PANASONIC	0080 • 0034 • 0056 • 0164 • 0208 • 0359
PHILCO	0116 • 0003 • 0059 • 0060 • 0164 • 0363
	0024 • 0056
PHILIPS	0164 • 0005 • 0093 • 0038 • 0116 • 0003
	0363 • 0059 • 0127 • 0206 • 0431 • 0333
PILOT	0116
PIONEER	0234 • 0135 • 0025 • 0018 • 0023 • 0116
	0393 • 0272
POLAROID	0388 • 0323 • 0328 • 0353 • 0354 • 0355
	0356 • 0494 • 0387 • 0391 • 0505 • 0506
	0508
PORTLAND	0363 • 0143
PRINCETON	0004
PRISM	0034
PROSCAN	0333
PROTON	0363 • 0112 • 0058 • 0143 • 0171 • 0172
PROTRON	0392 • 0398 • 0498 • 0499 • 0500
PROVIEW	0494
PULSAR	0116 • 0073
QUASAR	0034 • 0056
RADIO SHACK	0019 • 0363 • 0143 • 0043 • 0127
RCA	0333 • 0065 • 0116 • 0363 • 0024 • 0056
	0152 • 0023 • 0074
REALISTIC	0007 • 0019 • 0043 • 0047
REVOLUTION HD	0466
RUNCO	0182 • 0073 • 0395 • 0416 • 0072 • 0342
SAMPO	0116 • 0058 • 0363 • 0242
SAMSUNG	0258 • 0050 • 0089 • 0105 • 0363 • 0127
	0143 • 0333 • 0228 • 0229
SAMSUX	0116
SANSEI	0076
SANSUI	0096 • 0400
SANYO	0166 • 0007 • 0020 • 0053 • 0057 • 0082
	0187 • 0511 • 0266
SCEPTRE	0276
SCOTCH	0116
SCOTT	0028 • 0043 • 0048 • 0143 • 0363 • 0497
SEARS	0030 • 0363 • 0007 • 0028 • 0057 • 0143
	0094 • 0333 • 0082 • 0166 • 0138
SELECO	0205 • 0011
SHARP	0251 • 0019 • 0014 • 0028 • 0029 • 0363
	0022 • 0143 • 0175 • 0308
SHENG CHIA	0081
SHERWOOD	0349
SHOGUN	0116
SIGNATURE	0072
SIMPSON	0003
SONY	0001
SOUNDESIGN	0028 • 0363 • 0003 • 0043
SOVA	0041
SOYO	0528 • 0033
SPECTRICON	0112
SPECTRONIQ	0499 • 0500
SQUAREVIEW	0052
SSS	0363 • 0043
STARLITE	0043
SUPERSCAN	0052 • 0081
SUPRA	0116
SUPRE MACY	0002
SUPREME	0001
SVA	0328
SYLVANIA	0116 • 0003 • 0052 • 0059 • 0060 • 0164
	0044 • 0333 • 0127 • 0514
SYMPHONIC	0052
SYNTAX OLEVIA	0432 • 0363 • 0333
TANDY	0251
TATUNG TECHNICS	0056 • 0034 • 0080
TECHNOLACE	0028
TECHVIEW	0045
TECHWOOD	0363
TEKNIKA	0002 • 0003 • 0363 • 0024 • 0028 • 0043
	0072 • 0258 • 0143
TELEFUNKEN	0037 • 0046
TELERENT	0072
TERA	0172
THOMSON	0049 • 0055
TMK	0363
TNCI	0073
TOSHIBA	0138 • 0030 • 0007 • 0040 • 0258 • 0325
	0230
TOTEVISION	0143
TRUTECH	0529
TVS	0096
UNIVERSAL	0008 • 0009
VICTOR	0038
VIDEO CONCEPTS	0146
VIDIKRON	0174 • 0164 • 0188 • 0192 • 0342
VIDTECH	0363
VIEWSONIC	0242 • 0389
VIKING	0002
VIORE	0472
VISCO	0526
VITO	0363
VIZIO	0386 • 0387
WARDS	0363 • 0008 • 0009 • 0019 • 0028 • 0060
	0061 • 0072 • 0074 • 0143 • 0164 • 0034
WAYCON	0015
WESTINGHOUSE	0076 • 0276 • 0435 • 0001
WINBOOK	0339
YAMAHA	0116 • 0363 • 0370
YORK	0363
YUPITERU	0043
ZENITH	0363 • 0073 • 0072 • 0095 • 0103
ZONDA	0112
CW600	0078
CW800	0079
AISIDA	0084 • 0085

TV-LCD

ACCURIAN	0036
ADVENT	0247 • 0388
AKAI	0404 • 0405 • 0473 • 0475 • 0323 • 0387
	0391
AOC	0116 • 0363
APEX DIGITAL	0006
ASTAR	0477
AUDIOVOX	0454 • 0388 • 0076
AVION	0441
AXION	0039
CHANGHONG	0247
CYBERHOME	0015
DAEWOO	0076 • 0363
DELL	0320 • 0164 • 0363
DURABRAND	0052
DWIN	0257
DYNEX	0400
ELECTROGRAPH	0466
ELEMENT	0363 • 0494 • 0526
EMERSON	0514 • 0363 • 0076 • 0052
ESA	0323
FUJITSU	0246 • 0198
FUNAI	0052
GATEWAY	0242 • 0268
GO VIDEO	0026
HAIER	0363 • 0501
HANNSPREE	0349 • 0381
HISENSE	0419 • 0442
HITACHI	0011 • 0363
HP	0378 • 0316 • 0327 • 0421
HUMAX	0518
HYUNDAI	0337 • 0338
ILO	0472
INFOCUS	0547
INITIAL	0035 • 0282
INSIGNIA	0350 • 0400 • 0052 • 0164 • 0403 • 0454
	0457
JVC	0038 • 0210
KLEGG	0466
KONKA	0457
KREISEN	0530
LG	0363
LITEON	0268
LOEWE	0164
MAGNAVOX	0164 • 0363 • 0226 • 0390 • 0467
MARANTZ	0116 • 0164 • 0281
MAXENT	0242
MINTEK	0362
MITSUBISHI	0124 • 0363
NEC	0272 • 0262
NIKO	0527
NORCENT	0390
NORWOOD MICRO	0027
NUVISION	0351
OLEVIA	0432 • 0363 • 0333
PANASONIC	0080 • 0164 • 0208
PHILIPS	0164 • 0363 • 0431 • 0161
PIONEER	0234 • 0135 • 0393 • 0272
POLAROID	0388 • 0323 • 0328 • 0353 • 0356 • 0494
	0387 • 0391 • 0505 • 0506
PRINCETON	0004
PROTRON	0392 • 0398 • 0498 • 0499 • 0500
PROVIEW	0494
RCA	0333 • 0363
REVOLUTION HD	0466
RUNCO	0395 • 0416
SAMPO	0363 • 0242
SAMSUNG	0258 • 0228 • 0229
SANSUI	0096 • 0400
SANYO	0166 • 0077
SCEPTRE	0276
SHARP	0251 • 0363
SHERWOOD	0349
SONY	0001
SOVA	0041
SOYO	0528 • 0033
SPECTRONIQ	0499 • 0500
SVA	0328
SYLVANIA	0052 • 0164 • 0333 • 0514
SYMPHONIC	0052
SYNTAX OLEVIA	0432 • 0363 • 0333
TATUNG	0056
TECHVIEW	0045
TOSHIBA	0138 • 0258 • 0325
TRUTECH	0529
VIEWSONIC	0242 • 0389
VIORE	0472
VISCO	0526
VITO	0363
VIZIO	0386 • 0387
WESTINGHOUSE	0076 • 0276 • 0435 • 0001
WINBOOK	0339
YAMAHA	0116 • 0363
ZENITH	0363 • 0073 • 0072

TV-Projection Tvs

AKAI	0404 • 0405 • 0473 • 0475
DAEWOO	0076
EPSON	0324
HITACHI	0011
HP	0378
INFOCUS	0333 • 0548
JVC	0038
LG	0363
LOEWE	0164
MAGNAVOX	0164 • 0333
MITSUBISHI	0109
OPTOMA	0265
PANASONIC	0080
PHILIPS	0164 • 0431
RCA	0333
SAMSUNG	0258
SANYO	0166 • 0007 • 0187
SHARP	0251
SONY	0001
TOSHIBA	0138
ZENITH	0363 • 0073 • 0072

TV-Projectors

BENQ	0423
BOXLIGHT	0266
DREAMVISION	0235
FUJITSU	0410
HITACHI	0250
INFOCUS	0230
JVC	0199
KNOLL SYSTEMS	0230
MARANTZ	0281
MITSUBISHI	0348
NEC	0236 • 0281
OPTOMA	0249
PANASONIC	0359
RUNCO	0342 • 0182
SANYO	0511 • 0266
SELECO	0205
SHARP	0308
SIM2	0205
TOSHIBA	0230
VIDIKRON	0342 • 0174 • 0188 • 0192
YAMAHA	0370

VCR

ADMIRAL	3025 • 3053
ADVENTURA	3034
AIKO	3117
AIWA	3034 • 3161
AKAI	3016 • 3146 • 3043 • 3124 • 3125
AMERICA ACTION	3117
AMERICAN HIGH	3145
AMPRO	3072
ANAM	3145
ASHA	3102
AUDIO DYNAMICS	3012 • 3039 • 3043
AUDIOVOX	3101
BEAUMARK	3102
BROKSONIC	3035 • 3037 • 3129
CALIX	3101
CAPEHART	3108
CCE	3024 • 3117
CITIZEN	3101 • 3117
COLT	3024
CRAIG	3003 • 3022 • 3102
CURTIS MATHES	3145
CYBERNEX	3102
DAEWOO	3111 • 3116 • 3117 • 3005 • 3010 • 3108
	3110 • 3120
DAYTRON	3108
DBX	3012 • 3039 • 3043
DYNATECH	3034 • 3053
ELECTROHOME	3059
ELECTROPHONIC	3101
EMERSON	3006 • 3029 • 3035 • 3017 • 3025 • 3034
	3036 • 3037 • 3101 • 3129 • 3131 • 3153
	3162 • 3116 • 3145
FISHER	3003 • 3010 • 3008 • 3009
FUJI	3145
FUNAI	3034
GARRARD	3034
GE	3072 • 3144 • 3147 • 3145
GO VIDEO	3132 • 3136 • 3155 • 3115 • 3102
GOLDSTAR	3101 • 3114 • 3013 • 3012 • 3123
GRADIENTE	3034
HARLEY DAVIDSON	3034
HARMAN KARDON	3012
HARWOOD	3024
HITACHI	3026 • 3150 • 3034 • 3043 • 3160 • 3013
HQ	3034
INSTANTREPLAY	3145
JCL	3145
JCPENNEY	3012 • 3013 • 3015 • 3101 • 3102
JENSEN	3043
JVC	3048 • 3043 • 3130 • 3150 • 3012 • 3145
KEC	3101
KENWOOD	3048 • 3034
KLH	3024
KODAK	3101 • 3145
LG	3101 • 3114 • 3013 • 3012 • 3123
LLOYD	3034
LOGIK	3024
LXI	3034 • 3003 • 3009 • 3017
MAGIN	3102
MAGNAVOX	3067 • 3034 • 3164 • 3145
MARANTZ	3067 • 3012 • 3145
MARTA	3101
MATSUSHITA	3145
MEI	3145
MEMOREX	3101 • 3003 • 3010 • 3034 • 3053 • 3072
	3102 • 3139 • 3145
MGA	3059
MGN TECHNOLOGY	3102
MINOLTA	3013
MITSUBISHI	3059 • 3061 • 3151 • 3013 • 3051
MOTOROLA	3053 • 3145
MTC	3034 • 3102
MULTITECH	3024 • 3034
NEC	3012 • 3039 • 3043 • 3048
NIKKO	3101
NOBLEX	3102
NORDMENDE	3043
OLYMPUS	3145
OPTIMUS	3101
OPTONICA	3053
ORION	3025
PANASONIC	3070 • 3145 • 3163 • 3167
PENTAX	3013 • 3145
PHILCO	3034 • 3067 • 3145
PHILIPS	3067 • 3034 • 3101 • 3071 • 3145
PILOT	3101
PIONEER	3021 • 3013 • 3048
PORTLAND	3108
PROFITRONIC	3102
PROTEC	3024
PULSAR	3072
QUARTZ	3002
QUASAR	3145
RADIO SHACK	3123
RADIX	3101
RANDEX	3101
RCA	3144 • 3147 • 3145 • 3013 • 3034 • 3102
REALISTIC	3003 • 3008 • 3010 • 3034 • 3053 • 3101
	3145 • 3102
RICO	3058
RUNCO	3148
SAMSUNG	3102 • 3113 • 3115 • 3120 • 3144 • 3147
	3125
SANKY	3053
SANSUI	3022 • 3043 • 3048
SANYO	3003 • 3010 • 3102
SCOTT	3017 • 3037 • 3120 • 3129 • 3131
SEARS	3003 • 3008 • 3010 • 3013 • 3101 • 3009
	3017 • 3073 • 3112
SHARP	3053 • 3165 • 3145
SHINTOM	3024
SHOGUN	3102
SIGNATURE	3034
SINGER	3024
SONY	3001 • 3057 • 3058 • 3003 • 3053 • 3154
	3145
SOUNDESIGN	3034
STS	3013
SYLVANIA	3034 • 3059 • 3067 • 3145
SYMPHONIC	3034
TANDY	3010 • 3034
TATUNG	3039 • 3043
TEAC	3034 • 3039 • 3043
TECHNICS	3070 • 3145
TEKNIKA	3019 • 3034 • 3101 • 3145
THOMAS	3034
TMK	3006
TOSHIBA	3131 • 3008 • 3059 • 3013 • 3120
TOTEVISION	3101 • 3102
UNITECH	3102
VECTOR RESEARCH	3012
VICTOR	3048
VIDEO CONCEPTS	3012 • 034
VIDEOSONIC	3102
VILLAIN	3034
WARDS	3003 • 3013 • 301 • 3024 • 3034 • 3053
	3131 • 3145 • 3102
WESTINGHOUSE	3024 • 3025
XR-1000	3024 • 3034 • 3145
YAMAHA	3012 • 3034 • 3039 • 3043
ZENITH	3072 • 3080 • 3056 • 3048 • 3101 • 3034
	3058

VCR-TV/VCR Combos

AMERICA ACTION	3117
DAEWOO	3005 • 3117
EMERSON	3153
FUNAI	3034
GOLDSTAR	3101 • 3123
HARLEY DAVIDSON	3034
HITACHI	3034
JCPENNEY	3101
LG	3101 • 3123
LLOYD	3034
MAGNAVOX	3034 • 3067
MEMOREX	3101
PANASONIC	3070 • 3167
PHILIPS	3034 • 3067
RADIO SHACK	3123
RCA	3034 • 3144
SEARS	3101
SONY	3057 • 3154
SYLVANIA	3067
SYMPHONIC	3034
THOMAS	3034
ZENITH	3034

DVD

ACCURIAN	4003 • 4268
ADCOM	4157
ADVENT	4005
AIWA	4146
AKAI	4281
ALLEGRO	4091
ALPINE	4098
AMW	4006 • 4007
APEX DIGITAL	4087 • 4111 • 4115
ASPIRE DIGITAL	4008 • 4009
AUDIOVOX	4003 • 4010 • 4014 • 4015 • 4149
BEL CANTO DESIGN	4016
BLAUPUNKT	4111
BROKSONIC	4130
BUFFALO	4264
CALIFORNIA AUDIO LABS	4021 • 4124
CARY AUDIO DESIGN	4174 • 4266
CENTRIOS	4019
CINEVISION	4091
CITIZEN	4020
COBY	4260
CYBERHOME	4271
DAEWOO	4132
DENON	4080 • 4173 • 4138
DIAMOND VISION	0037 • 4038 • 4039
DISNEY	4040 • 4096
DURABRAND	4091
DVD 2000	4017
EMERSON	4091 • 4143
ENTERPRISE	4074
ESA	4022 • 4143
FISHER	4147
FUNAI	4143
GATEWAY	4222
GE	4027
GO VIDEO	4137 • 4091 • 4220 • 4221 • 4222
GOLDSTAR	4091
GPX	0044 • 4045
GRADIENTE	4021
GREENHILL	4111
GRUNDIG	4083
HARMAN KARDON	4084 • 4140
HITACHI	4101
HITEKER	4087
ILO	4268
INITIAL	4111
INSIGNIA	4143 • 4292 • 4297
INTEGRA	4142 • 4180 • 4280
JATON	4046
JBL	4084
JSI	4047
JVC	4012
JWIN	4048 • 4050
KAWASAKI	4149
KENWOOD	4151
KISS	4279
KLH	4135
KONKA	4051 • 4052 • 4054 • 4055
KOSS	4047 • 4058 • 4059
KREISEN	4060
KRELL	4104
LASONIC	4061 • 4062
LEXICON	4148
LG	4091 • 4057 • 4074
LITEON	4264 • 4265 • 4268
LOEWE	4063
MAGNAVOX	4066 • 4096 • 4282
MALATA	4267
MARANTZ	4066
MCINTOSH	4125
MEMOREX	4040 • 4096 • 4163
MERIDIAN	4153
MICROSOFT	4027 • 4206
MINTEK	4111 • 4282
MITSUBISHI	4017
MYRYAD	4102 • 4134
NAD	4088
NAKAMICHI	4103
NESA	4111
NEUNEO	4067
NEXXTECH	4068
NORCENT	4005 • 4006 • 4007 • 4069 • 4071 • 4072
	4073
ONKYO	4076 • 4141 • 4180
OPPO	4266
OPTIMUS	4023
ORION	4130
ORITRON	4058
PANASONIC	4144 • 4150 • 4285 • 4138 • 4021
PARASOUND	4245
PHILIPS	4066 • 4276
PHILIPS MAGNAVOX	4141 • 4066
PIONEER	4023 • 4099 • 4131 • 4304
POLAROID	4233 • 4284 • 4295 • 4297
POLK AUDIO	4141 • 4066
PRESIDIAN	4003 • 4096
PRIMA	4005
PRIMARE	4193 • 4194
PRINCETON	4078
PROSCAN	4027
RCA	4027 • 4307
RIO	4091
RJTECH	4269
ROTEL	4204
SAMPO	4081 • 4082 • 4085
SAMSUNG	4070 • 4165 • 4137 • 4159 • 4275
SANSUI	4154
SANYO	4147
SEARS	4130
SENSORY SCIENCE	4222
SHARP	4094
SHERWOOD	4245
SHINSONIC	4033
SONIC BLUE	4091
SONY	4001 • 4033 • 4145 • 4191 • 4286
SPECTRONIQ	4310
SUNGALE	4090 • 4233
SUPERSCAN	4143
SVA	4092 • 4093
SYLVANIA	4143
SYMPHONIC	4143
TAG MCLAREN	4156
TATUNG	4102
TEAC	4023 • 4270
TECHNICS	4138
TECHWOOD	4088
THETA DIGITAL	4023
THOMPSON	4027
TOSHIBA	4130 • 4141 • 4164 • 4188 • 4273
TRUTECH	4293
URBAN CONCEPTS	4035
US LOGIC	4111 • 4282
VENTURER	4149
VINC	4161 • 4308
X-BOX	4027 • 4206
YAMAHA	4089 • 4066 • 4197 • 4138
ZENITH	4057 • 4074 • 4091

DVD-Blu-ray&HD DVD

LG	4091
PANASONIC	4285
PIONEER	4304
SAMSUNG	4275
SONY	4286
TOSHIBA	4273

DVD-DVD Recorders

GO VIDEO	4220 • 4221 • 4222
CYBERHOME	4271
ILO	4268
KISS	4279
LITEON	4265 • 4268
PANASONIC	4138
SAMSUNG	4301
SENSORY SCIENCE	4222
SONY	4191
TOSHIBA	4188 • 4273

DVD-TV/DVD Combos

AIWA	4146
AKAI	4281
AUDIOVOX	4284
DURABRAND	4143
ESA	143
FUNAI	4143
INSIGNIA	4292 • 4297 • 4143
MAGNAVOX	4282
MINTEK	4282
POLAROID	4284 • 4295 • 4297
SAMSUNG	4165
SV2000	4143
SYLVANIA	4143
SYMPHONIC	4143
TOSHIBA	4130
TRUTECH	4293

DVD-TV/DVD/VCR Combos

DURABRAND	4143
EMERSON	4143
ESA	4143
INSIGNIA	4143
MAGNAVOX	4143
PANASONIC	4144
SUPERSCAN	4143
SV2000	4143
SYLVANIA	4143
SYMPHONIC	4143
TOSHIBA	4164

DVD-DVD/VCR Combos

GO VIDEO	4137
PANASONIC	4150
PHILIPS	4066(VCR Function for VCR 4067)
SAMSUNG	41374159
SANSUI	4154
SONY	4145
TOSHIBA	4141
ZENITH	4091(VCR Function for VCR 410

AUDIO

ADCOM	6082 • 6092 • 6225 • 6161
	6269 • 6356
AIWA	6170 • 6018 • 6104 • 6202 • 6203 • 6213
	6211 • 6188 • 6699
AKAI	6189
ANTHEM	6335 • 6337
ARAGON	6687
ARCAM	6141 • 6077
ATLANTIC TECHNOLOGY	6342
AUDIO FILE	6071
B & K	6096 • 6097
BOSE	6070 • 6170 • 6224 • 6347 • 6409 • 6460
	6532
BOSTON ACOUSTICS	6447
CAMBRIGE AUDIO	6684
CARVER	6006 • 6028 • 6061 • 6071 • 6201 • 6214
	6226 • 6185 • 6013 • 6077 • 6284
CARY AUDIO DESIGN	6378
CITATION	6148
CLARION	6026
DELPHI	6515 • 6556
DENON	6109 • 6215 • 6230 • 6234 • 6330 • 6340
	6679 • 6564
ELAN	6057 • 6290
ENLIGHTENED AUDIO	6099 • 6098
ESCIENT	6451
FISHER	6214 • 6182
FLEXTRONICS	6378
FOSGATE AUDIONICS	6148 6342
GOLDSTAR	6008
HARMAN KARDON	6148 • 6233 • 6077 • 6028 • 6118 • 6318
HITACHI	6020
INSIGNIA	6589
INTEGRA	6275 • 6017 • 6046 • 6108 • 6080 • 6209
JAMO	6398
JCPENNEY	6216
JVC	6163 • 6191 • 6114 • 6279 • 6291
KEF	6530
KENWOOD	6026 • 6066 • 6145 • 6192 • 6182 • 6005
	6280 • 6374
KLEGG	6686
KLH	6331
KLIPSCH	6687
KOSS	6216 • 6573
KRELL	6072 • 6384 • 6672
LEXICON	6120 • 6235 • 6236 • 6237 • 6357 • 6360
LINN	6124 • 6377
LUXMAN	6009 • 6139 • 6052 • 6165 • 6115 • 6004
MAGNAVOX	6086 • 6164 • 6152 • 6077
MARANTZ	6006 • 6028 • 6031 • 6040 • 6063 • 6185
	6186 • 6265 • 6289 • 6492
MCINTOSH	6238 • 6286
MERIDIAN	6100 • 6012 • 6013 • 6628
MITSUOBISHI	6242 • 6204
MONDIAL	6157 • 6158 • 6042 • 6043 • 6081 • 6112
MYRYAD	6077
NAD	6186 • 6113 • 6598
NAKAMICHI	6040 • 6244 • 6245 • 6172 • 6183 • 6287
NEC	6176
NILES	6403
NIRO	6343
ONKYO	6275 • 6017 • 6046 • 6108 • 6080 • 6209
	6552
OPTIMUS	6026 • 6041
OUTLAW	6342
PANASONIC	6032 • 6195 • 6219 • 6177 • 6292 • 6626
	6516
PARASOUND	6129 • 6130 • 6132 • 6261 • 6294 • 6295
	6333 • 6334
PHILIPS	6249 • 6250 • 6063 • 6690
PIONEER	6014 • 6039 • 6044 • 6069 • 6168 • 6116
	6035 • 6063 • 6198 • 6480 • 6556 • 6513
POLKAUDIO	6556 • 6685
PROCEED	6144 • 6268
RCA	6010 • 6048 • 6117 • 6156 • 6067 • 6288
REALISTIC	6019 • 6073 • 6075 • 6095
ROTEL	6074 • 6083 • 6085 • 6654
RUSSOUND	6445
SAMSUNG	6016 • 6653 • 6571
SANSUI	6040 • 6048 • 6110 • 6063 • 6065 • 6228
SANYO	6214
SCOTT	6019
SHARP	6026 • 6094 • 6175 • 6652
SHERWOOD	6024 • 6102 • 6106 • 6447 • 6370
SIRIUS	6555 • 6585 • 6767 • 6588
SONY	6001 • 6018 • 6247 • 6248 • 6166 • 6101
	6184 • 6218 • 6271 • 6380
SOUNDESIGN	6036
SUNFIRE	6344 • 6345 • 6182
TEAC	6005 • 6019 • 6049 • 6040 • 6212 • 6217
TECHNICS	6122 • 6176 • 6193 • 6219 • 6178 • 6177
	6200 • 6257 • 6262
THETA DIGITAL	6136
TOSHIBA	6060 • 6087 • 6198 • 6278 • 6510
XM SATELLITE RADIO	6515 • 6556
YAMAHA	6026 • 6253 • 6169 • 6067 • 6173 • 6205
	6264 • 6232 • 6089 • 6264 • 6274
ZENITH	6143 • 6210

DVR(TIVO)

HUGHES	7817
HUMAX	7817
PHILIPS	7790 • 7817
RCA	7809
REPLAY NETWORKS	7775
SONY	7804 • 7805
TIVO	7790 • 7817
TOSHIBA	7817

AUX

AUX-Home Theater Systems

AIWA	5699
BOSE	5347 • 5409 • 5460
DENON	5564
INSIGNIA	5589
JAMO	5398
KEF	5530
KOSS	5573
NAD	5598
NIRO	5343
ONKYO	5552
PANASONIC	5516
PHILIPS	5690
PIONEER	5573
POLKAUDIO	5685
ROTEL	5654
SAMSUNG	5571
SHARP	5652
TOSHIBA	5510

AUX-Tuners&Satellite Radios

ANTEX ELECTRONICS	5588
BOSE	5532 • 5170
DELPHI	5515
NEXUS AUDIO	5751
PIONEER	5556
RUSSOUND	5445
SIRIUS	5555 • 5585 • 5767
SONY	5380
XM SATELLITE RADIO	5515 • 5556

AUX-iPod Controls

APPLE/iPod	5824 • 5828
BOSE	5827
DLO	5418
GRIFFIN	5835
KENSINGTON	5825
MARANTZ	5834
ONKYO	5833
SONANCE	5831

AUX-Media Purchase

ACER	5820
APPLE TV	5836
DELL	5820
DLINK	5832 • 5838
GATEWAY	5820
HAUPPAUGE	5821 • 5822
HP	5820
KEYSPAN	5823
NETGEAR	5837
SONY	5820
TOSHIBA	5820
WINBOOK	5820

AUX-Gaming Systems

MICROSOFT/XBOX	5851
MICROSOFT/XBOX	5360 • 5826
SONY/PS2	5829

AUX-Lighting Controls

COLORADIO VNET	5849
LEVITON	5850
LIGHTOLIER CONTROLS	5848
LITE TOUCH	5843 • 5844
LUTRON	5839 • 5841
RAKO	5846 • 5847
X-10	584 • 5842 • 5845

SAT

BELL EXPRESSVU	1168 • 1187 • 1194
CHANNEL MASTER	1117 • 1118 • 1119
CHAPPARAL	1100 • 1101
CHEYENNE	1101
DRAKE	1102 • 1114 • 1127
DISH NETWORK	1128 • 1129 • 1130 • 1168 • 1187 • 1188
	1194 • 1195
DX ANTENNA	1108 • 1122
ECHOSPHERE	1168
ECHOSTAR	1128 • 1129 • 1130 • 1168 • 1187 • 1194
FUJITSU	1131 • 1132
GE	1176 • 1162
GEMINI	1135
GENERAL INSTRUMENTS	1104 • 1105 • 1106 • 1133
	1180 • 1182 • 1183 • 1184
	1185
DSS HITACHI	1172 • 1181
DSSHUGHES SATELLITE	1169 • 1170 • 1172 • 1173 • 1178
JERROLD	1137
JVC	1188
KENWOOD	1138
LUXOR	1139
DSS MAGNAVOX	1116 • 1152 • 1179
MACOMSTATE	1140
NORSTAT	1141
PACE	1154 • 1155 • 1186
DSSPANASONIC	1126 • 1166
PRIMESTAR	1167 • 1180
PHILIPS	1116 • 1152 • 1179
PHILIPS/MAGNAVOX	1116 • 1152 • 1179
PIONEER	1124
PROSCAN	1162 • 1176
DSS RCA	1176 • 1189 • 1192 • 1193 • 1198
REALISTIC	1107 • 1143
SAMSUNG	1134 • 1153
SHARP	1144
SIERRA1,2,3	1101
DSS SONY	1125 • 1163
STARCHOICE	1167 • 1180 • 1185
STARSIGHT	1173
STARTRAK	1148
STS	1108 • 1110 • 1111
SUPERGUIDE	1149
THOMSON	1154
TOSHIBA	1112
TOSHIBA DSS	1164 • 1165 • 1171
UNIDEN	1113 • 1151
DSS UNIDEN	1173
VIDEO CIPHER2	1114
ZENITH	1102 • 1103 • 1114 • 1127 • 1135 • 1155
	1174 • 1175 • 1186
COOLSAT	1109
VIEWSAT	1120
OTHERS	1271 • 1272 • 1273 • 1274 • 1275 • 1276
	1277 • 1278 • 1279 • 1280 • 1281 • 1282
	1283 • 1284 • 1285 • 1286 • 1287 • 1288
	1289 • 1290 • 1291 • 1292 • 1293 • 1294
	1295 • 1296 • 1297 • 1298 • 1299 • 1300
	1301 • 1302 • 1303 • 1304 • 1305 • 1306
	1307 • 1308 • 1309 • 1310 • 1311 • 1312
	1313 • 1314 • 1315 • 1316 • 1317 • 1318
	1319 • 1320 • 1321 • 1322 • 1323 • 1324
	1325 • 1326 • 1327 • 1328 • 1329
ARIZA 700	1136
ARIZA XTREM E	1142
BUZZ	1145
CAPTAIN 7000-8000HD	1146
CW-100R	1147
CW-600s premium	1150
CW-600s regular	1157
CW-800s	1158
CONAXSAT TRIO-DUO	1159
COOLSAT 4000-5000-6000	1160
COOLSAT 7000	1161
COOLSAT 8000HD	1191
COOLTEC	1196
DIGWAVE DG_7200	1197
DIGIWAVE DIAMOND	1199
DIRECTV_HR-250	1200
DIRECTV_R10	1201
EBOX	1202
FORTEC STAR 5100	1203
FORTEC STAR 5600 II	1204
FORTEC STAR 5600 ULTRA	1205
FORTEC STAR CLASSIC NA-5000 V2-PLATINUM	1206
FORTEC STAR FS-5900	1207
FORTEC STAR LIFETIME ULTRA	1208
FORTEC STAR MERCURY II	1209
MEGASAT	1210
NEOSAT 1600	1211
NEOSAT IPRO 1000	1212
NEUSAT 9000HD	1213
NEUSAT SP-6000 PREMIUM	1214
NFUSION NOVA	1215
ORASAT 5010	1216
ORASAT V5.0	1217
PANSAT 1500-2500-5000	1218
PANSAT 2300	1219
PANSAT 2700-2800-3500-6000	1220
PANTEC 2500	1221
SKYVIEW 500	1222
SKYVIEW 600	1223
SONCIVIEW-1000-4000	1224
SONCIVIEW-8000	1225
SonicView-1000PVR	1226
SonicView-4000	1227
SonicView-8000HD	1228
SPACESTAR 500	1229
TESSAT	1230
VIEWSAT pro	1231
VIEWSAT pvr	1232
VIEWSAT xtreme-platinum-ultra	1233
XTREME VIEW MAGNUM 330	1234
ECHOSTAR-301	1235
ECHOSTAR-311	1236
ECHOSTAR-322	1237
ECHOSTAR-351	1238
ECHOSTAR-381	1239
ECHOSTAR-411	1240
ECHOSTAR-501	1241
ECHOSTAR-625	1242
ECHOSTAR-811	1243
ECHOSTAR-942	1244
ECHOSTAR-5022	1245
ECHOSTAR-DVR-510	1246
ECHOSTAR-HD-211	1247
ECHOSTAR-PVR-622	1248
EXPRESSVU-3100	1249
EXPRESSVU-3700	1250
EXPRESSVU-4700	1251
EXPRESSVU-5100	1252
EXPRESSVU-6000	1253
EXPRESSVU-9200	1254
NEOSAT IPRO 2000	1255
MICROYAL MRX 10	1256
starchoice DSR-207	1257
starchoice DSR-317	1258
starchoice DSR-500 HD	1259
starchoice DVR-530 HD	1260
starchoice Navigo 305	1261
starchoice Navigo 405	1262
Videotron Explorer 2000	1263
Videotron Explorer 2020	1264
Videotron Explorer 2100	1265
Videotron Explorer 2200	1266
Videotron Explorer 8000	1267
Videotron Explorer 8300	1268
GPSSOURCE	1269
DREAM	1270

HDTV/SAT CODES

HUGHES	1169 • 1170 • 1172 • 1178
PANASONIC	1126
PHILIPS	1156
RCA	1190 • 1198
SAMSUNG	1134 • 1153
SHARP	1144
SONY	1163
ZENITH	1135 • 1174

PVR/DVR-SAT COMBO CODES

BELL EXPRESSVU	1195
DISH NETWORK	1195
ECHOSTAR	1195
RCA	1176

CBL

ABC	2011 • 2014 • 2016 • 2017 • 2018 • 2019
ADELPHIA	2114
ALLEGRO	2095 • 2096
AMERICAST	2098
ANTRONIX	2021 • 2022
ARCHER	2021 • 2022 • 2023 • 2024
AT&T	2082
CABLETENNA	2021
CABLEVIEW	2021
CENTURY	2024
CITIZEN	2024
COLOUR VOICE	2025 • 2026
COMTRONICS	2027 • 2028
CONTEC/CONY	2029
EASTERN	2031
GARRARD	2024
GCELECTRONICS	2022
GEMINI	2032 • 2033 • 2110
GEMINI	2112
GENERAL INSTRUMENT	2016 • 2080 • 2082 • 2083
	2084 • 2088 • 2099 • 2101
	2102 • 2005 • 2103 • 2104
HAMLIN	2035 • 2036 • 2037 • 2049 • 2050 • 2055
HITACHI	2016 • 2103 • 2055
HYTEK	2014
JASCO	2024
JERROLD	2011 • 2016 • 2017 • 2018 • 2032 • 2038
	2080 • 2081 • 2082 • 2097 • 2099 • 2101
	2005 • 2004 • 2103 • 2005 • 2003 • 2008
	2009 • 2010 • 2069
MAGNAVOX	2043 • 2010 • 2012
MEMOREX	2048 • 2052
MOTOROLA	2011 • 2016 • 2017 • 2018 • 2031
	2038 • 2080 • 2081 • 2082 • 2083
	2084 • 2088 • 2097 • 2099 • 2101
	2102 • 2002 • 2148 • 2149 • 2150
MOVIE TIME	2014 • 2053
NSC	2014 • 2053
OAK	2014 • 2029 • 2058
PACE MICRO	2001 • 2005
PANASONIC	2007 • 2079 • 2044 • 2047
PARAGON	2048
PHILIPS	2024 • 2025 • 2026 • 2033 • 2048
	2059 • 2061 • 2062 • 2006 • 2012
	2013 • 2020 • 2085
PHILIPS/MAGNAVOX	2077 • 2107
PIONEER	2064 • 2065 • 2068 • 2001 • 2103
	2034 • 2051 • 2063 • 2076 • 2105
PULSAR	2048 • 2052
RADIOSHACK	2077 • 2096 • 2107
RCA	2007 • 2078 • 2047
REALISTIC	2022
REAGAL	2037
REGAL	2049 • 2050
REGENCY	2031 • 2057
REMBRANDT	2016
RUNCO	2048
SAMSUNG	2027 • 2065 • 2001 • 2030
SCIENTIFIC ATLANTA	2019 • 2066 • 2067 • 2068
	2109 • 2114 • 2115 • 2001
	2003 • 2041 • 2042 • 2045 • 2046
SIGNAL	2027 • 2032
SIGNATURE	2016
SLMARX	2027
SONY	2108
SPRUCER	2007 • 2047
STANDARD COMPONENTS	2070
STARCOM	2011 • 2032
STARGATE	2027 • 2032
STARSIGHT	2090
STAR SIGHT CABLE SERVICE	2078
STARQUEST	2032
STARTTRAK	2086
TANDY	2071
TELEVIEW	2027
TEXSCAN	2070
TOCOM	2017 • 2072 • 2083 • 2039 • 2040 • 2056
TOSHIBA	2048 • 2052
TUSA	2032
TV86	2053
UNIKA	2021 • 2022 • 2024
UNITED ARTISTS	2014
UNITED CABLE	2011
UNIVERSAL	2021 • 2022 • 2023 • 2024 • 2073
VIDEOWAY	2075
VIEWSTAR	2028 • 2043 • 2053 • 2071 • 2012 • 2015
VIDEOTECH	2113
ZENITH	2048 • 2054 • 2074 • 2087 • 2089 • 2090
	2091 • 2092 • 2094 • 2095 • 2096 • 2098
	2106 • 2052 • 2060 • 2093 • 210